




## 60" Laundry Wall Cabinet Assembly Guide - LW60

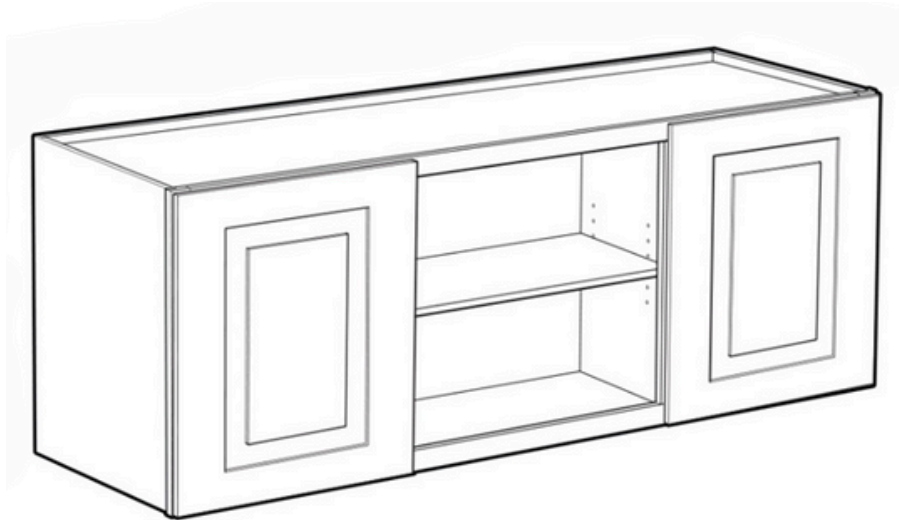

### IMPORTANT NOTES

Before you start, inspect all panels and hardware to ensure you have everything needed.

We recommend laying the panels on some cardboard to protect the finish when assembling.


In addition to the pre-installed hardware, we recommend adding a bead of white wood glue in the dado grooves, to create the strongest cabinet.




[www.millspride.com/rta](http://www.millspride.com/rta)

Scan this code for more detailed instructions, assembly videos and to register your cabinet warranty.


## PARTS

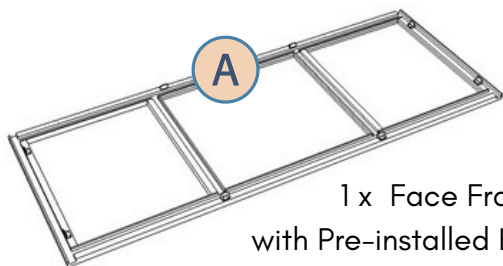


1 x Face Frame  
with Pre-installed Hardware

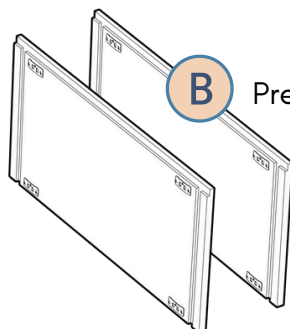


2 x End Panels  
with  
Pre-installed Hardware

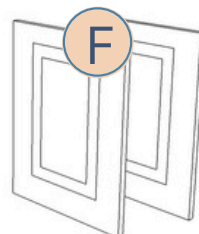

2 x Doors

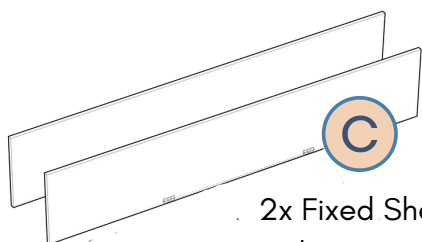


2x Fixed Shelves  
with Pre-installed  
Hardware

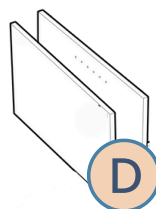


2 x Divider Panels




1 x Central  
Shelf

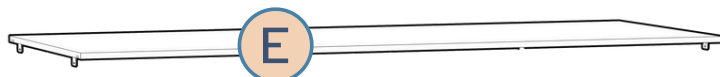


1 x Back Panel  
with  
Pre-installed  
Hardware

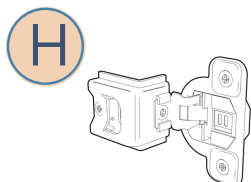


4 x Soft Close Hinges

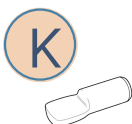

12 x Metal Shelf Rests

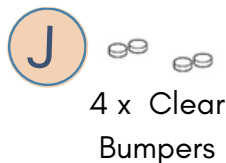

4 x Clear  
Bumpers

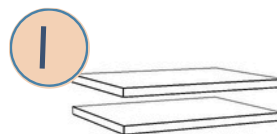

2 x Adjustable Shelves

L



24- #6 x 1/2" Pan Head Screws

M



8 - #6 x 5/8" Flat Countersink Screws

N



4 - #8 x 7/8" Pan Washer Head Screws

O






14 - #6 x 1" Flat Countersink Screws

## REQUIRED TOOLS



## Step 1




Start by laying the Frame (A) face down on a smooth flat surface. Insert the (2) End Panels (B) into the outer grooves in the Frame (A), as shown, so that the L-Brackets and Connector Plates 'snap' together.

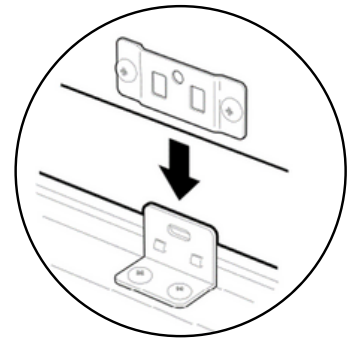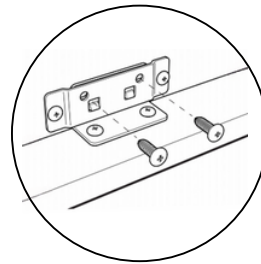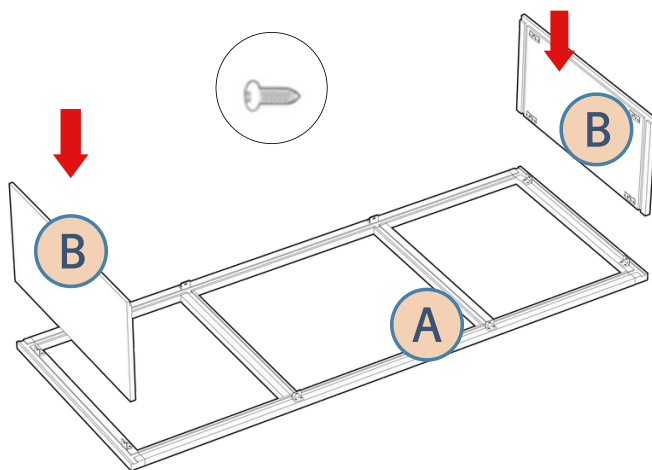

Align the panels and secure the Connector Plates with locking (8) #6 x 1/2" Pan Head screws (L).

## Step 2


Slide the (2) Fixed Shelves (C) into the horizontal grooves in the End Panels (B) and Frame (A), so that the L-Brackets and Connector Plates 'snap' together.

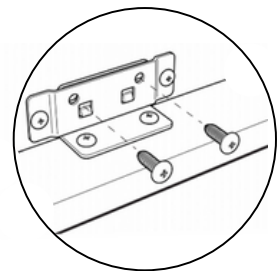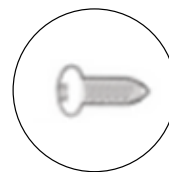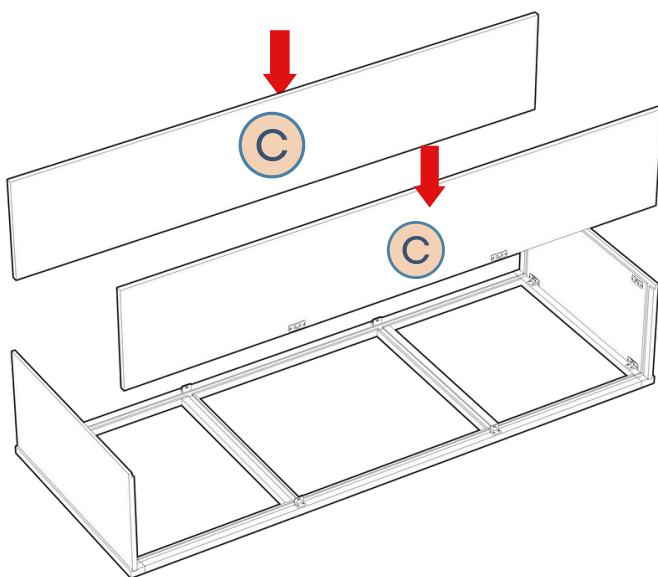

Align the panels and tighten the Connector Plate screws. Lock in place using (8) #6 x 1/2" Pan Head screws (L).


## Step 3

Slide (2) Divider Panels (D) into grooves in Fixed Shelves (C) and ensure they are fully seated in grooves in Face Frame (A).


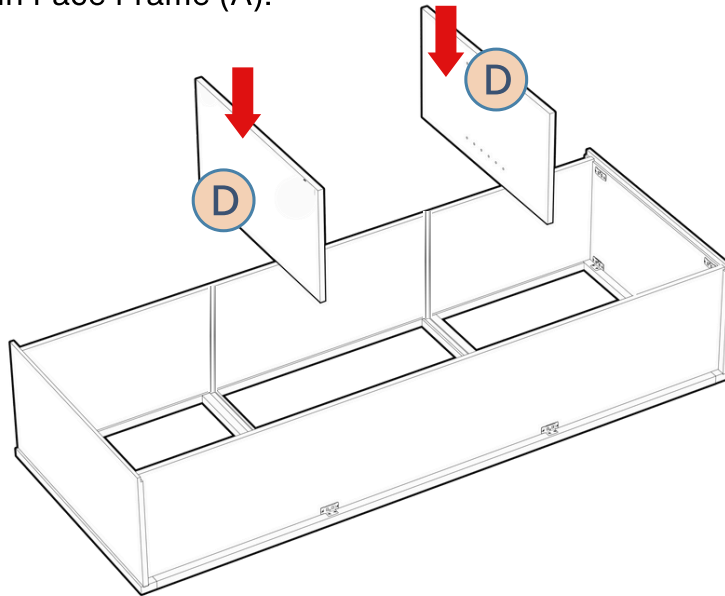


## Step 4

Carefully install the Back Panel (E), so that the L-Brackets and Connector Plates 'snap' together. This may require a second person. Ensure the Divider Panels are fully seated in the grooves in the Back Panel and the cabinet is square.

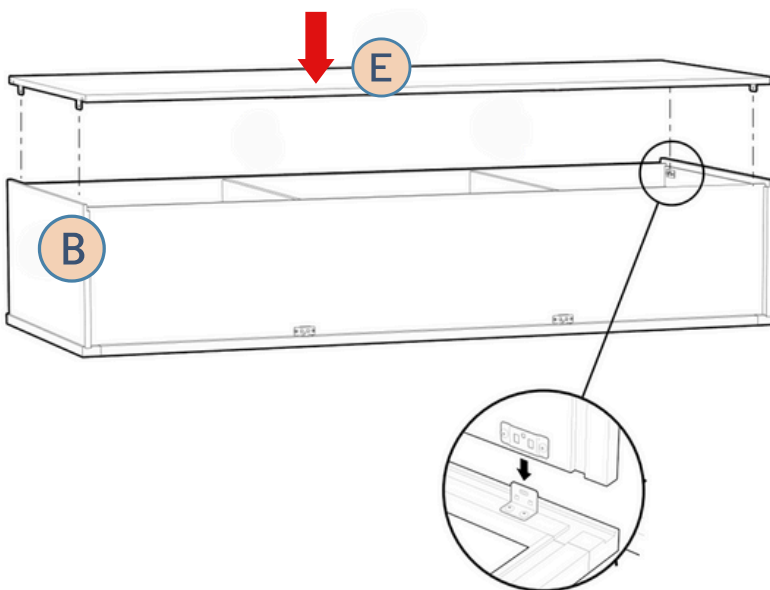


Now, insert (14) #6 x 1" Flat Head screws (O) through the predrilled holes in the Back Panel (E) and fully tighten.

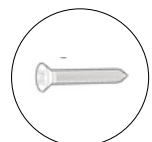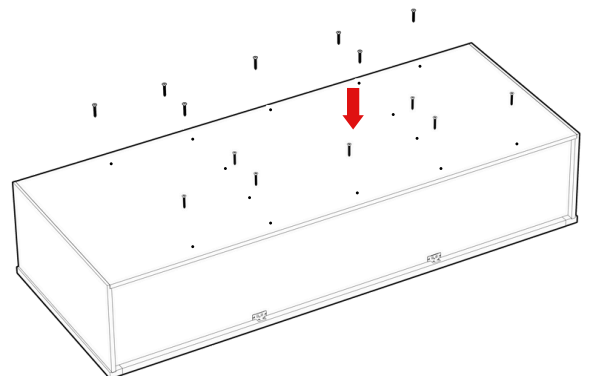


## Step 5

Carefully, turn the cabinet over and tighten the Connector Plate screws holding the Back Panel (E) in place. Lock the plates and L-brackets together using (8) #6 x 1/2" Pan Head locking screws (L).

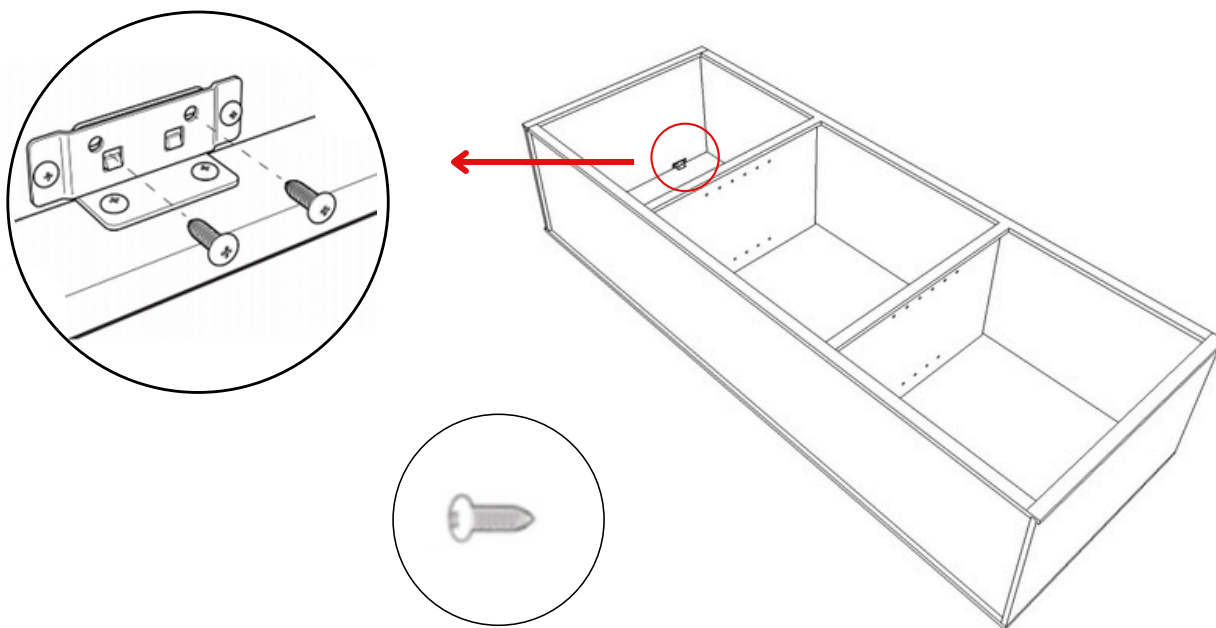


## Step 6

Lay the (2) Doors (F) face down on a smooth flat surface and install (4) Hinges (H) using (8) #6 x 5/8" Flat Head screws (M).

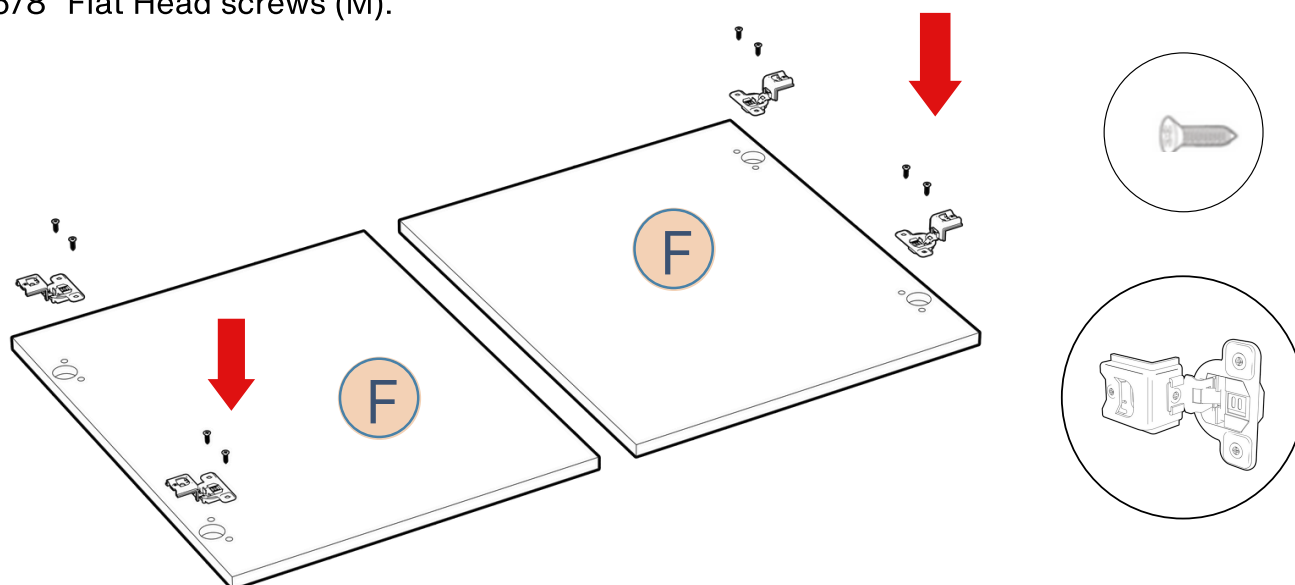

## Step 7

Attach the (2) Doors (F) to the Face Frame (A) using (4) #8 x 7/8" Pan Washer Head screws (N) and install (4) Clear Bumpers (J).

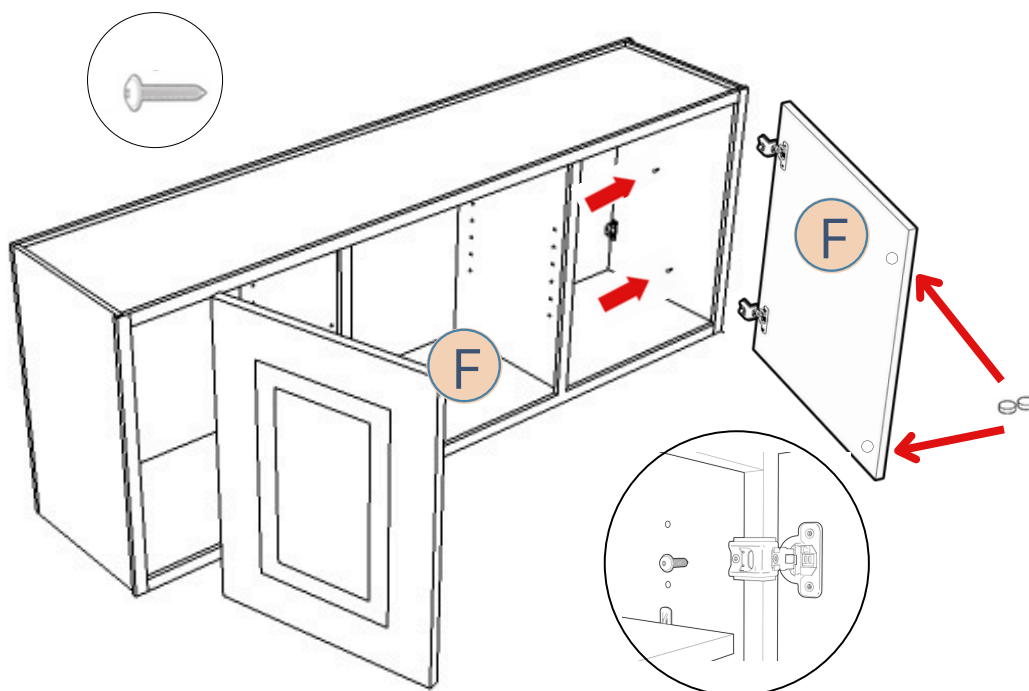

## Step 8

Insert (4) Metal Shelf Rests (K) in the open middle section and install Central Shelf (G). Insert (4) Metal Shelf Rests (K) in each of the outer sections and install (2) Adjustable Shelves (I).

