





Place (2) End Panels (B) on a flat smooth surface and install (8) x Connector Plates (J) using (16) #6 x 1/2" Pan Head screws (M).

** Do not fully tighten the screws until connected to the L-brackets!

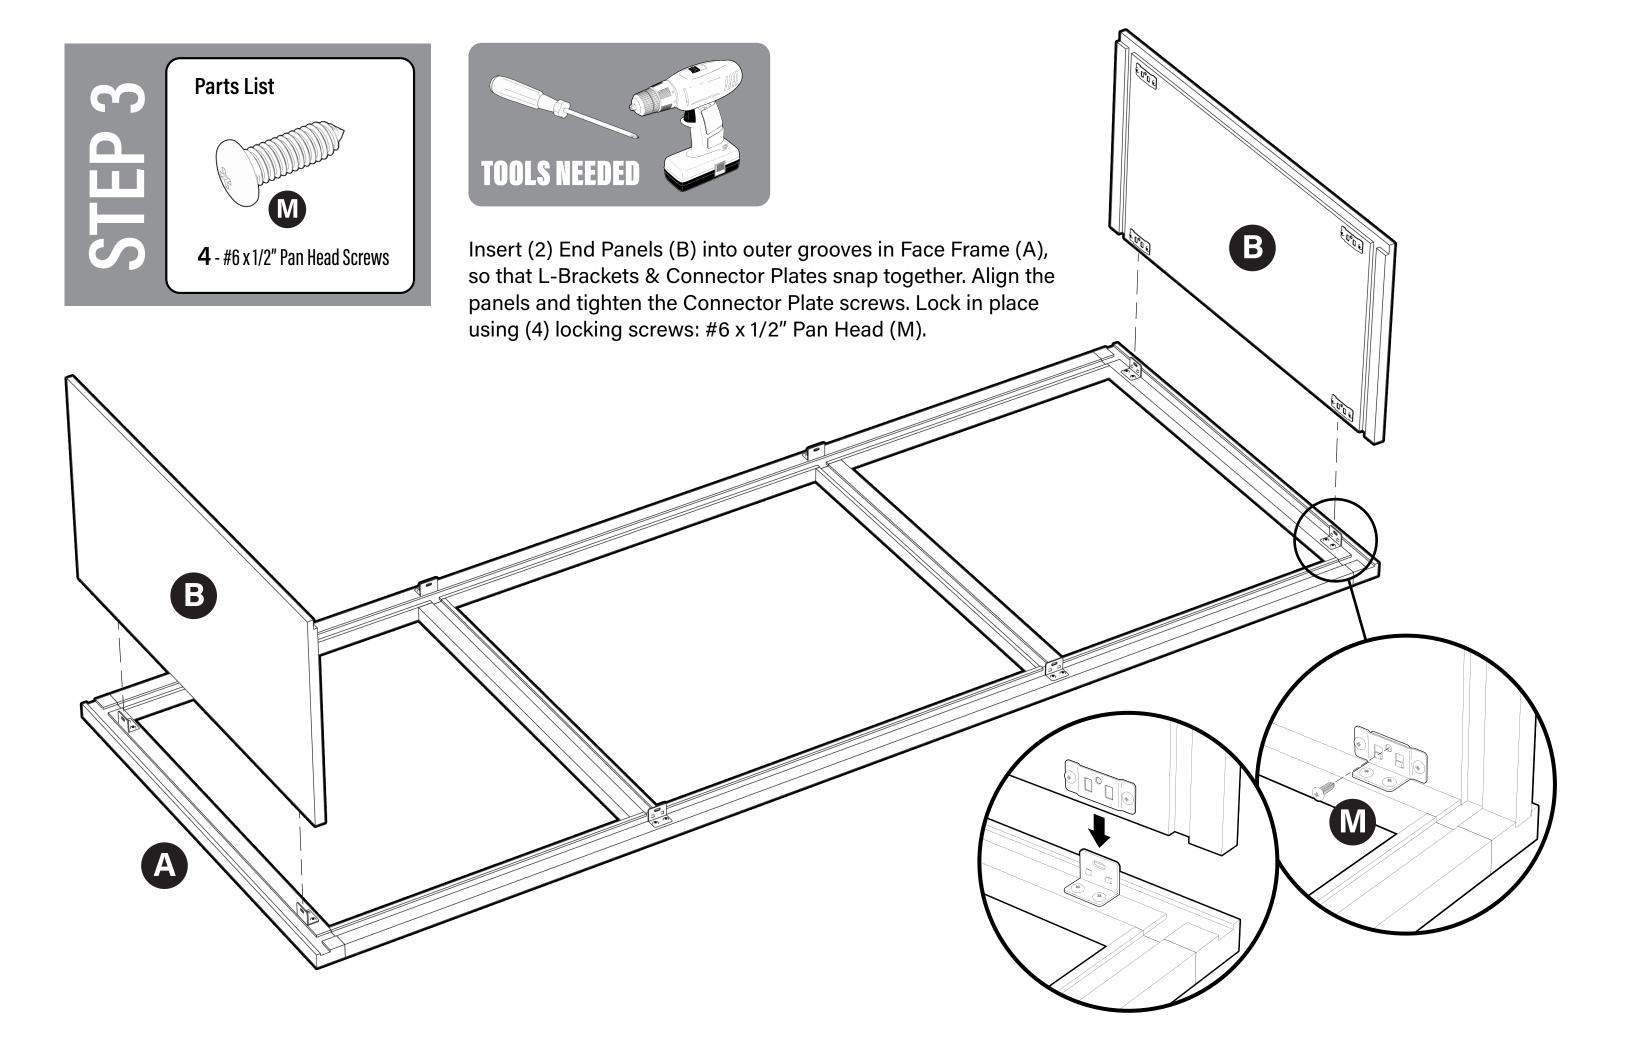


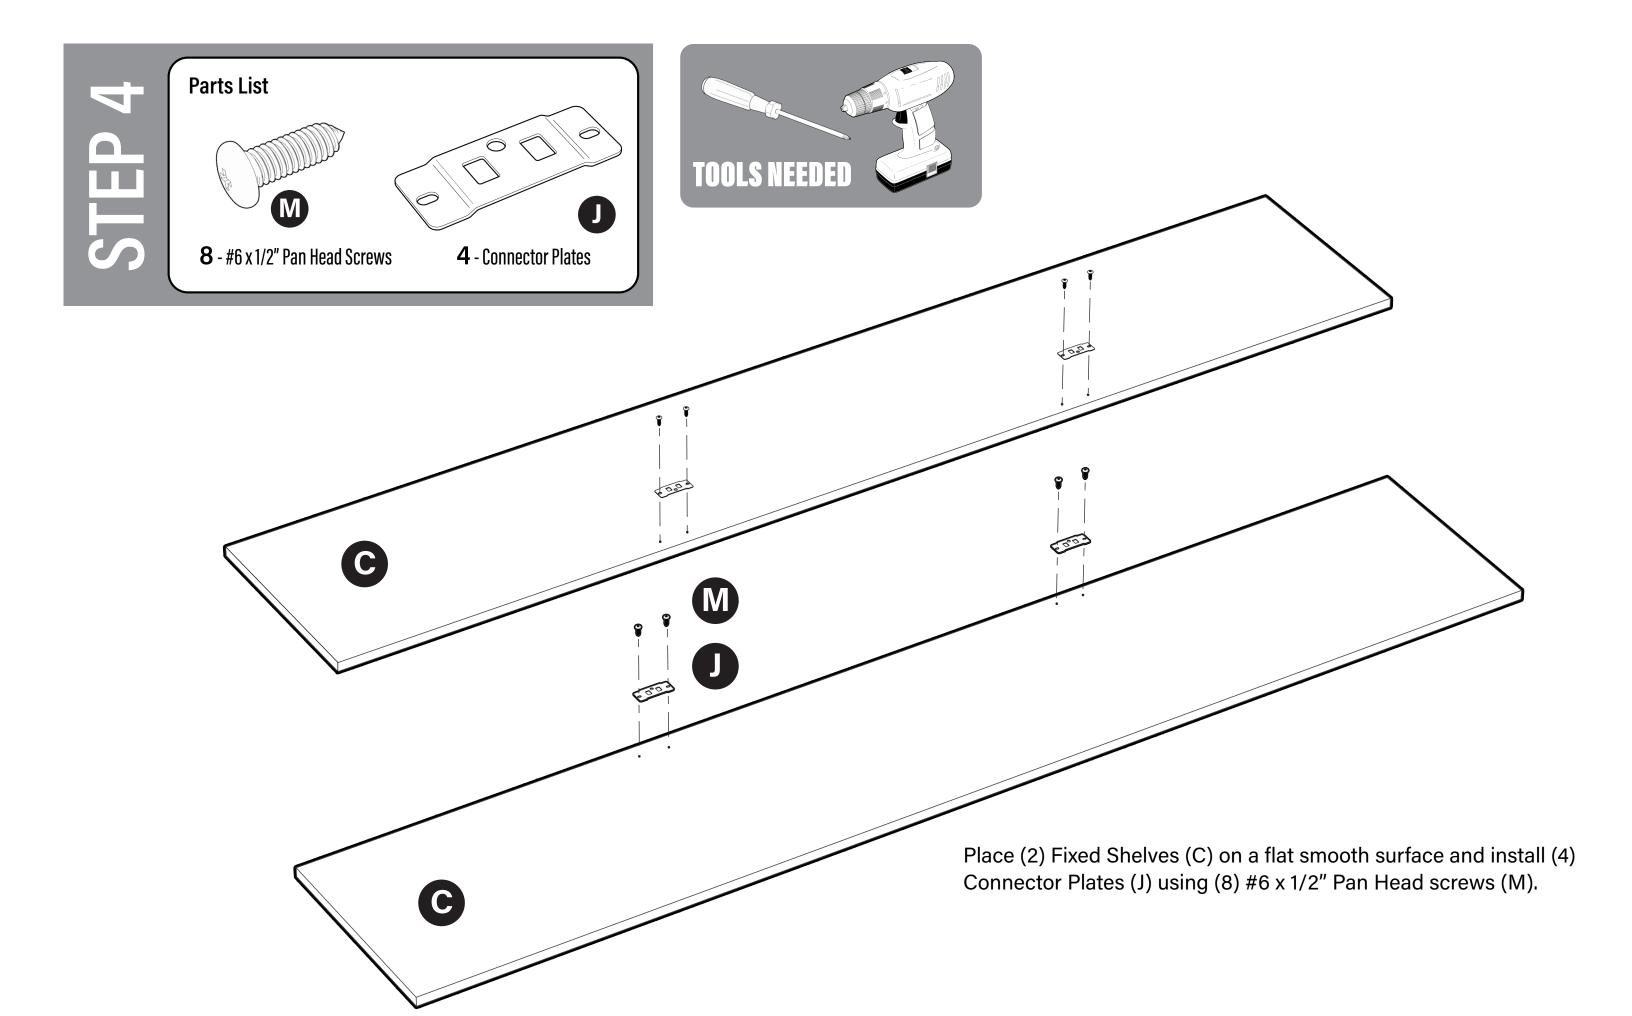


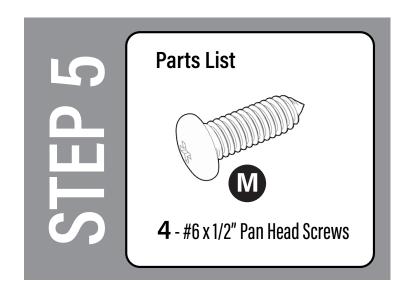


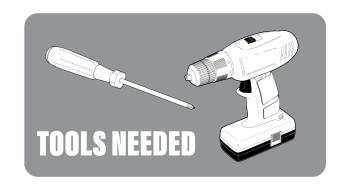



Slide (2) Fixed Shelves (C) into grooves in End Panels (B) and Face Frame (A) so that L-Brackets & Connector Plates snap in place, Align the panels and tighten the Connector Plate screws. Lock in place using (4) locking screws: #6 x 1/2" Pan Head screws (M).

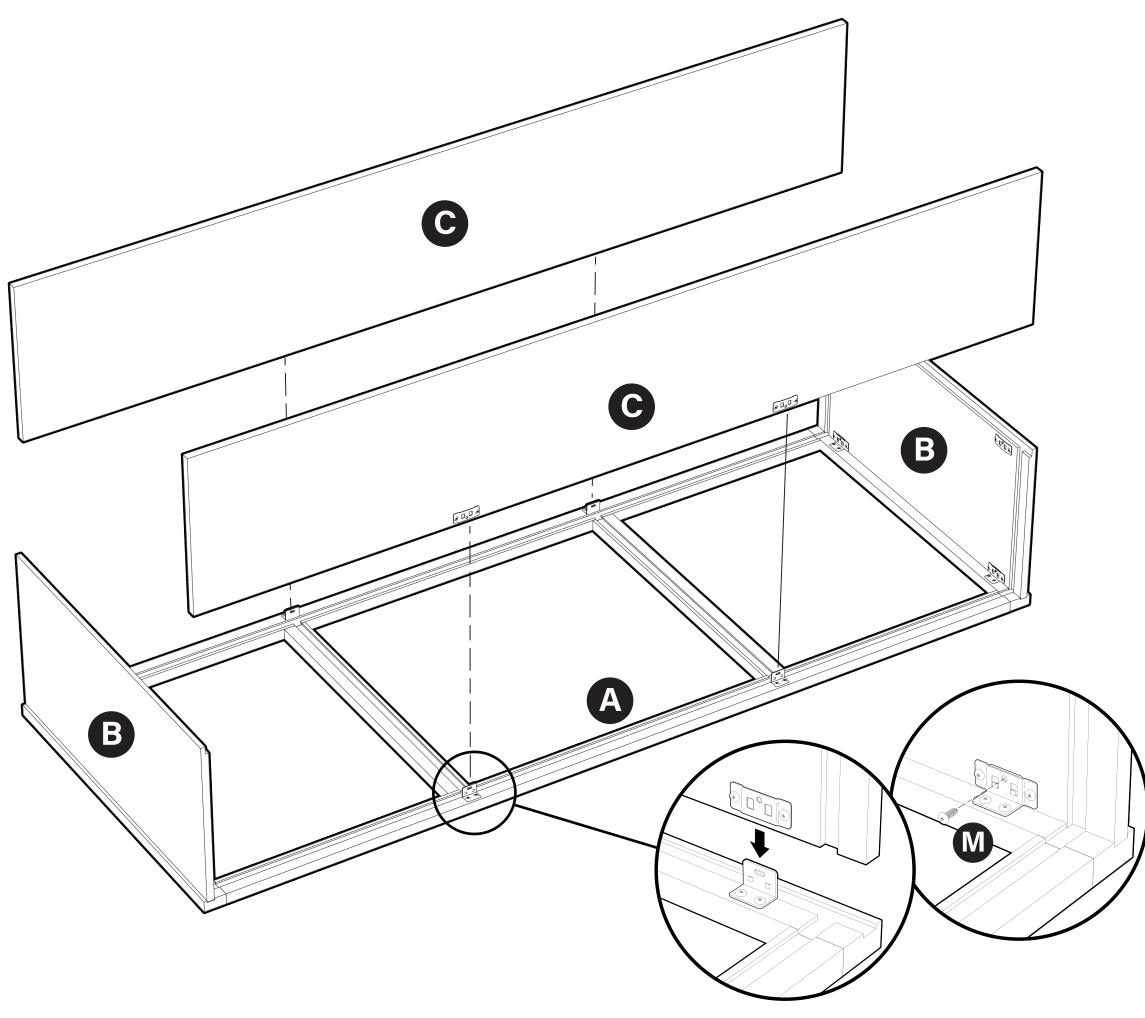


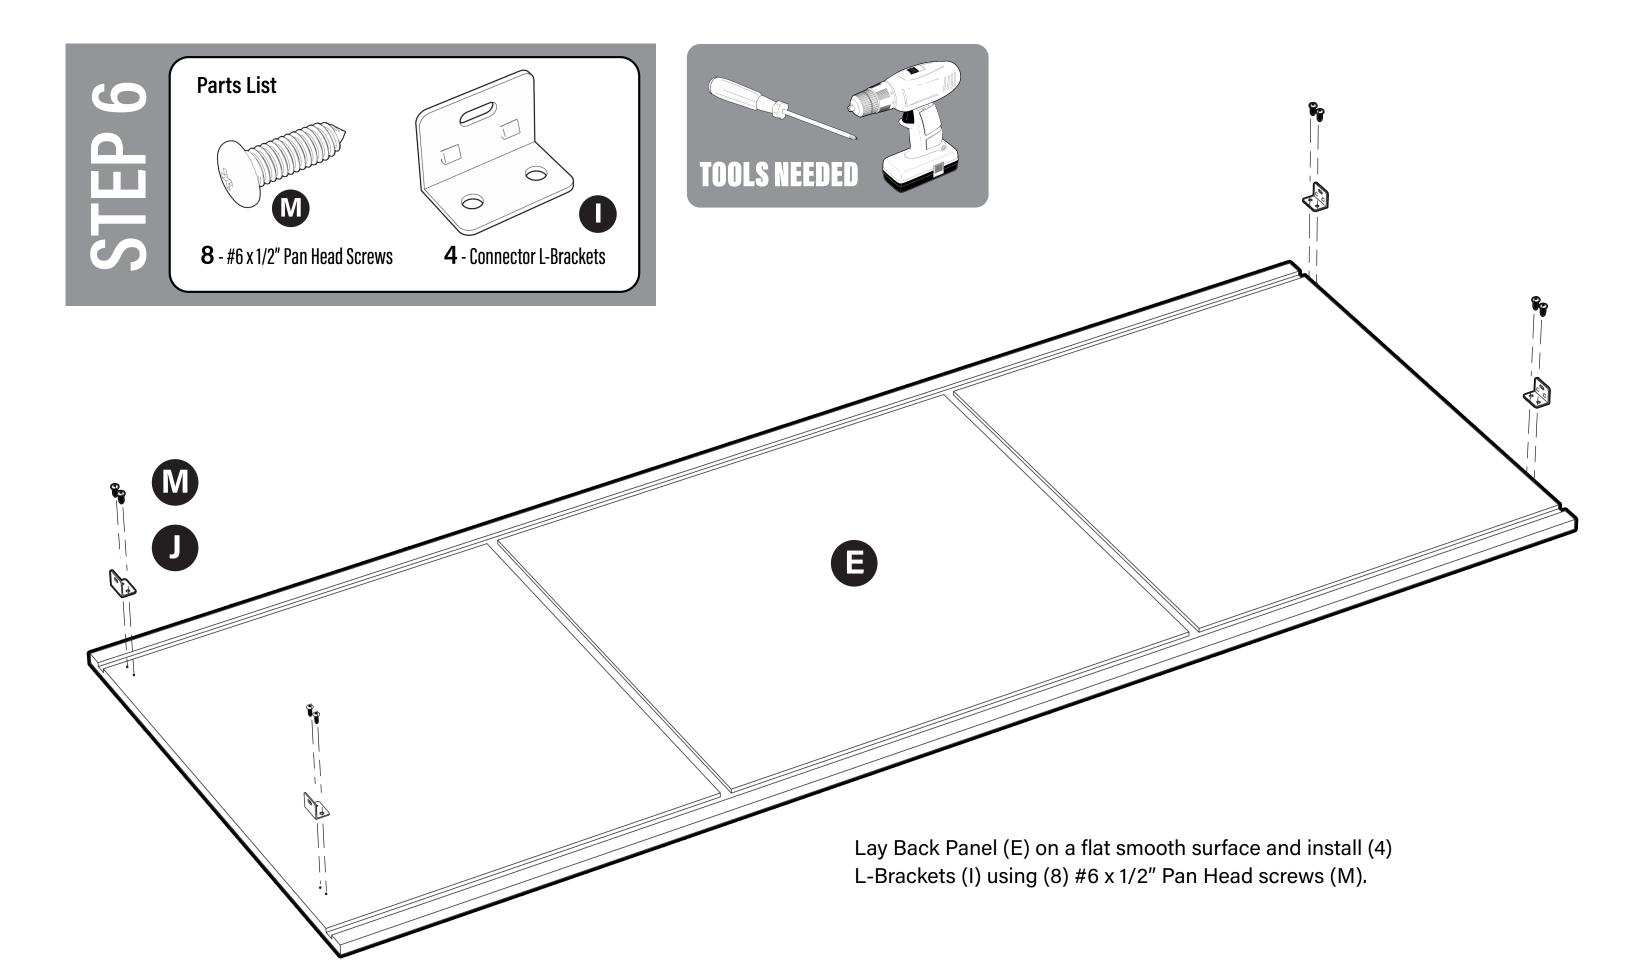

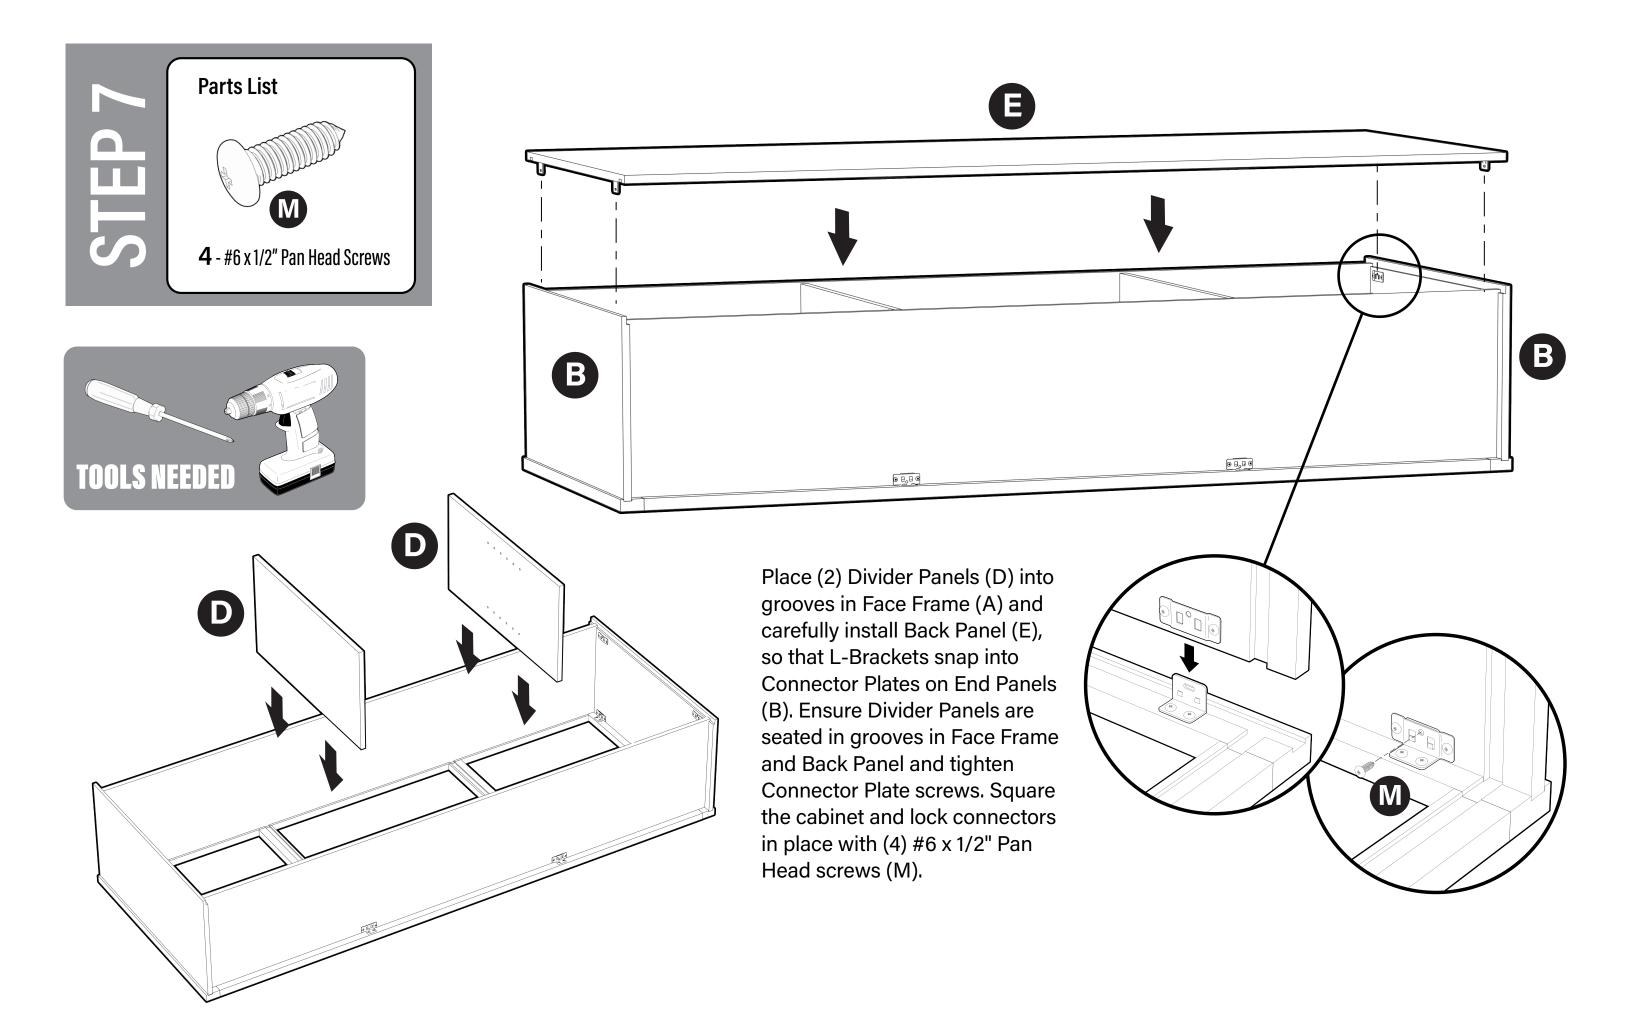

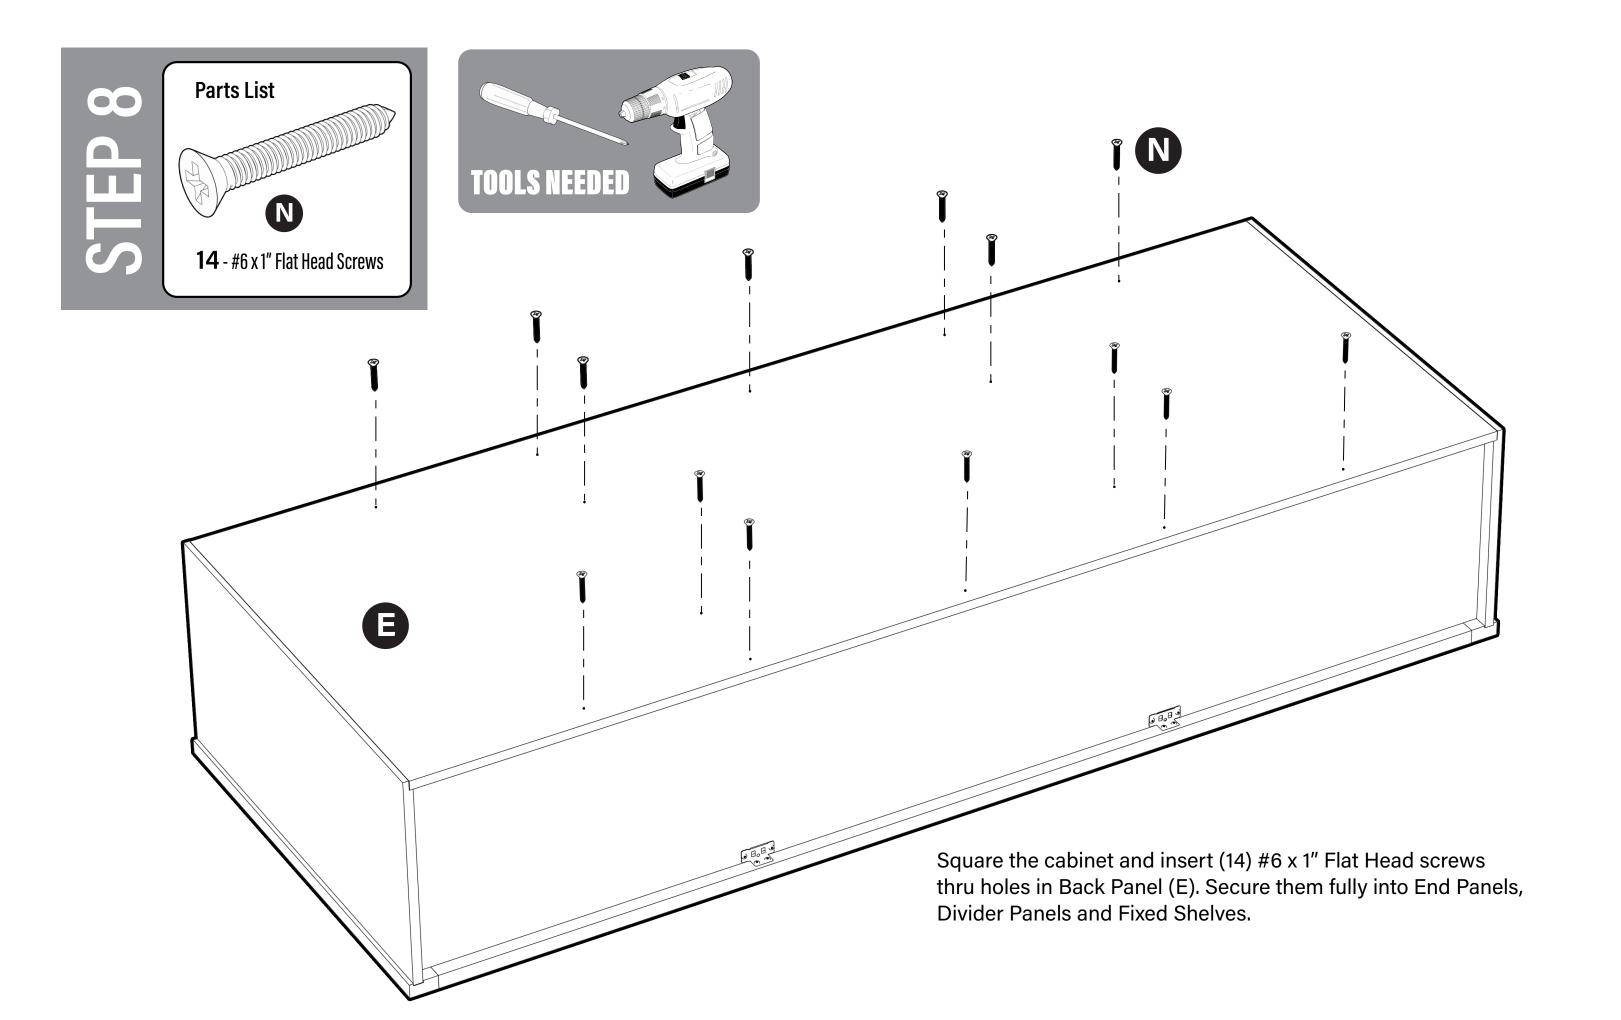

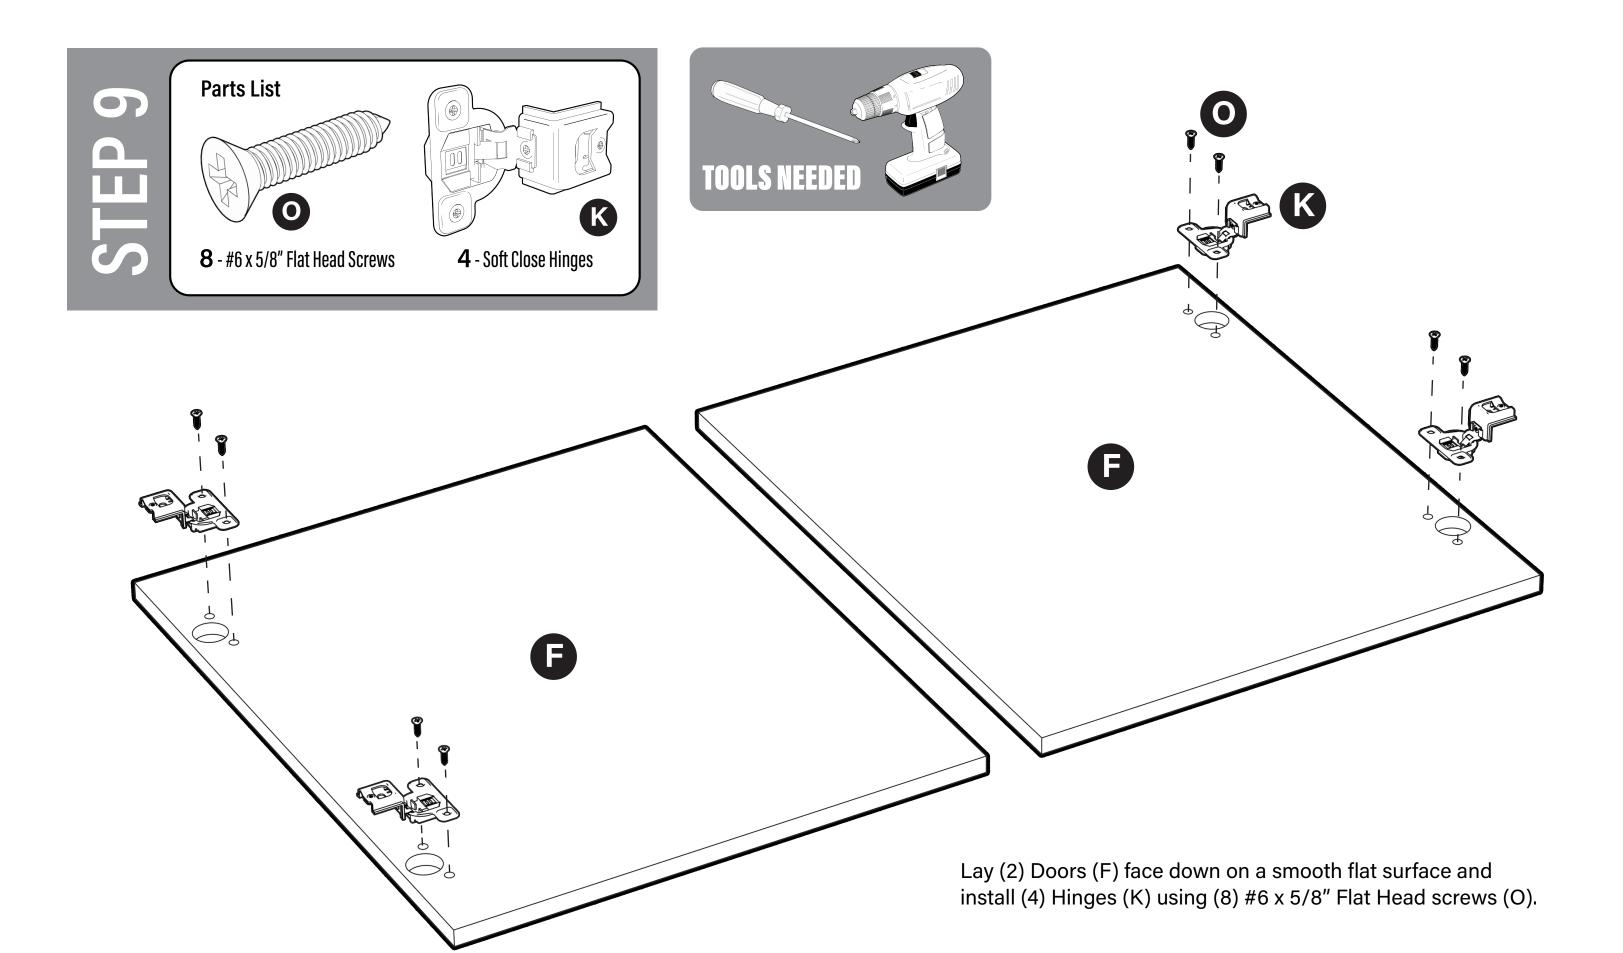

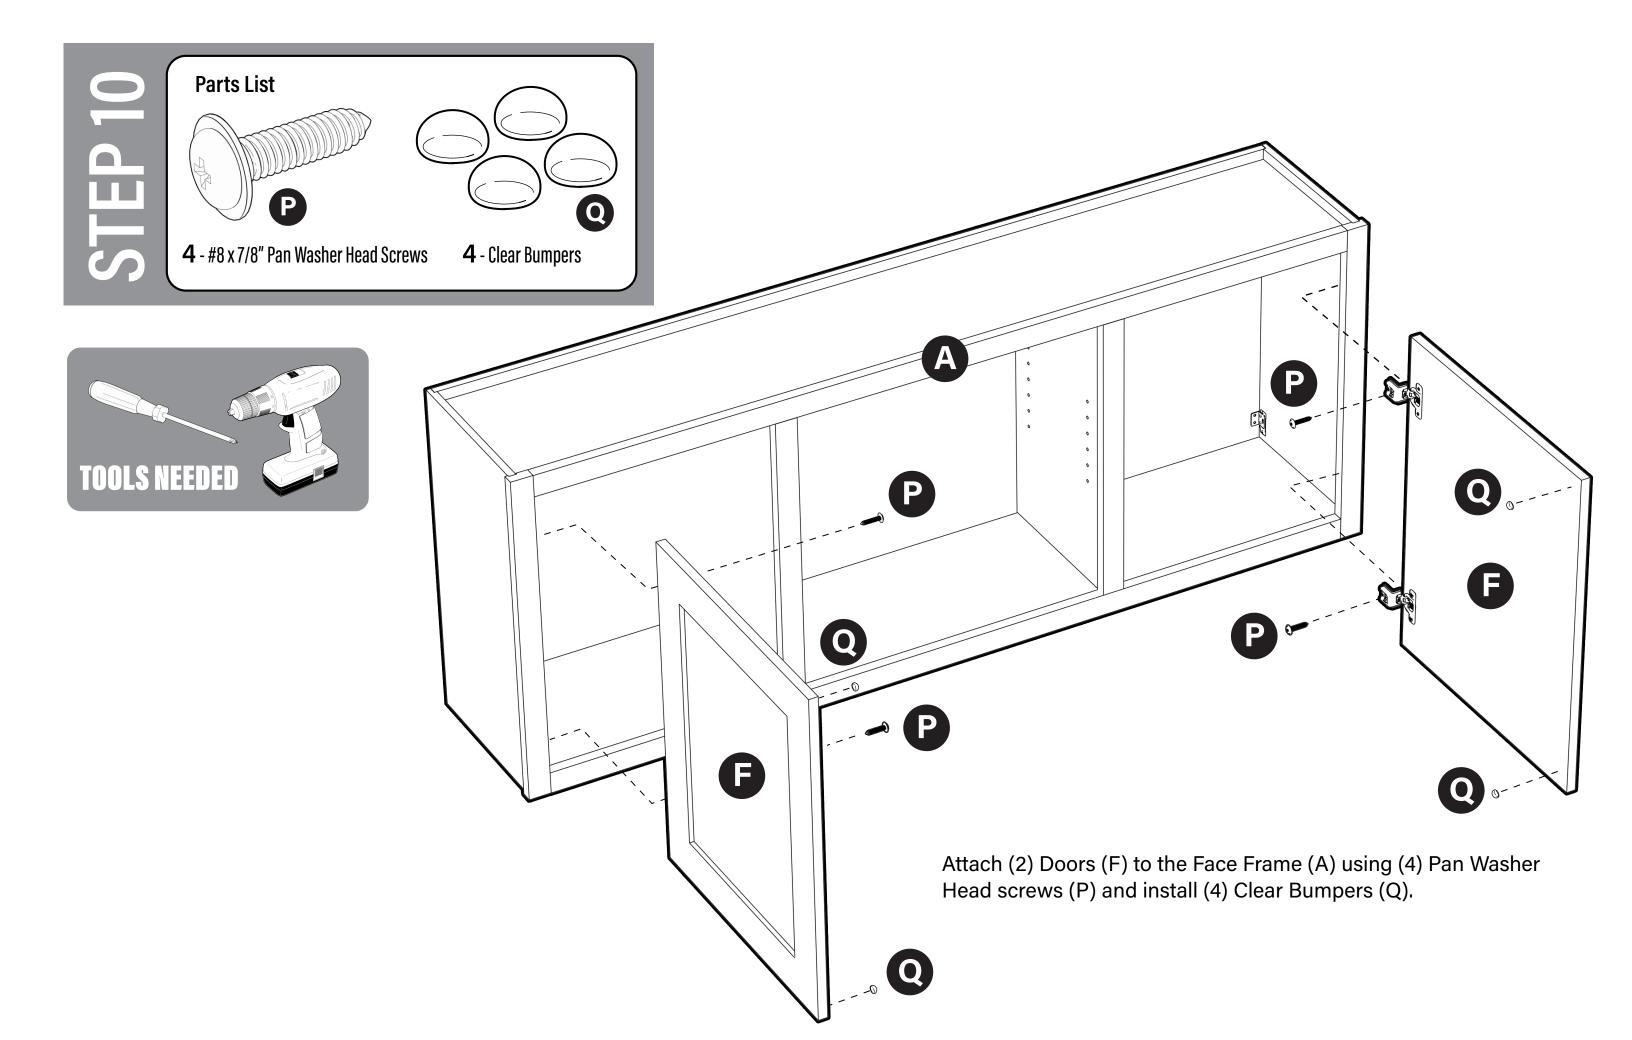



Parts List













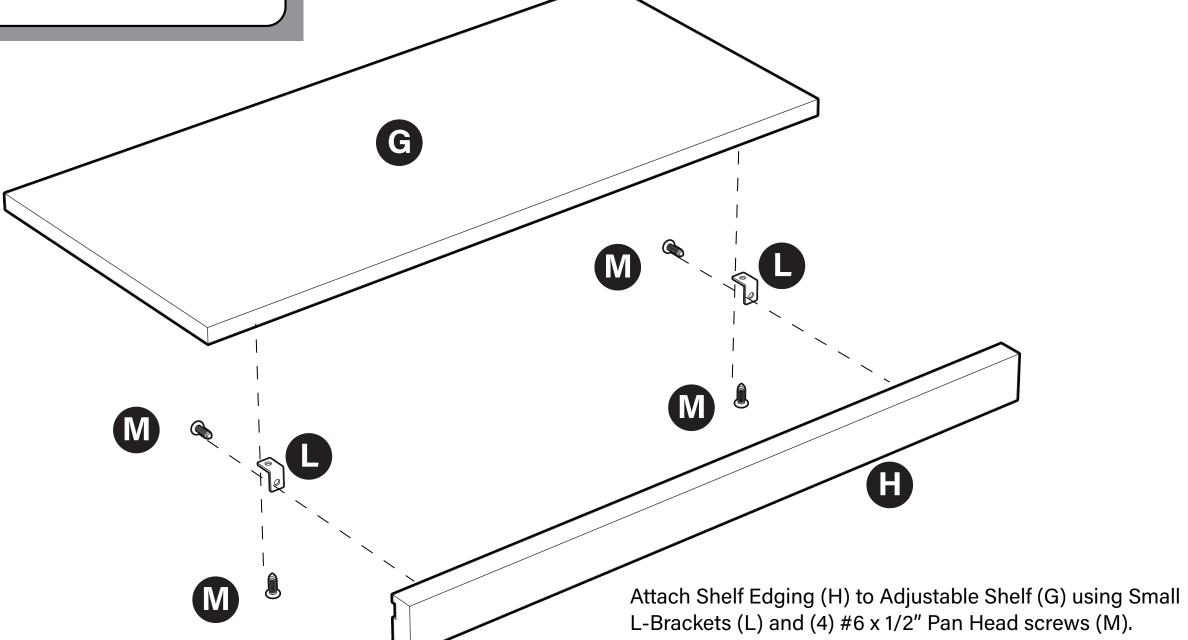

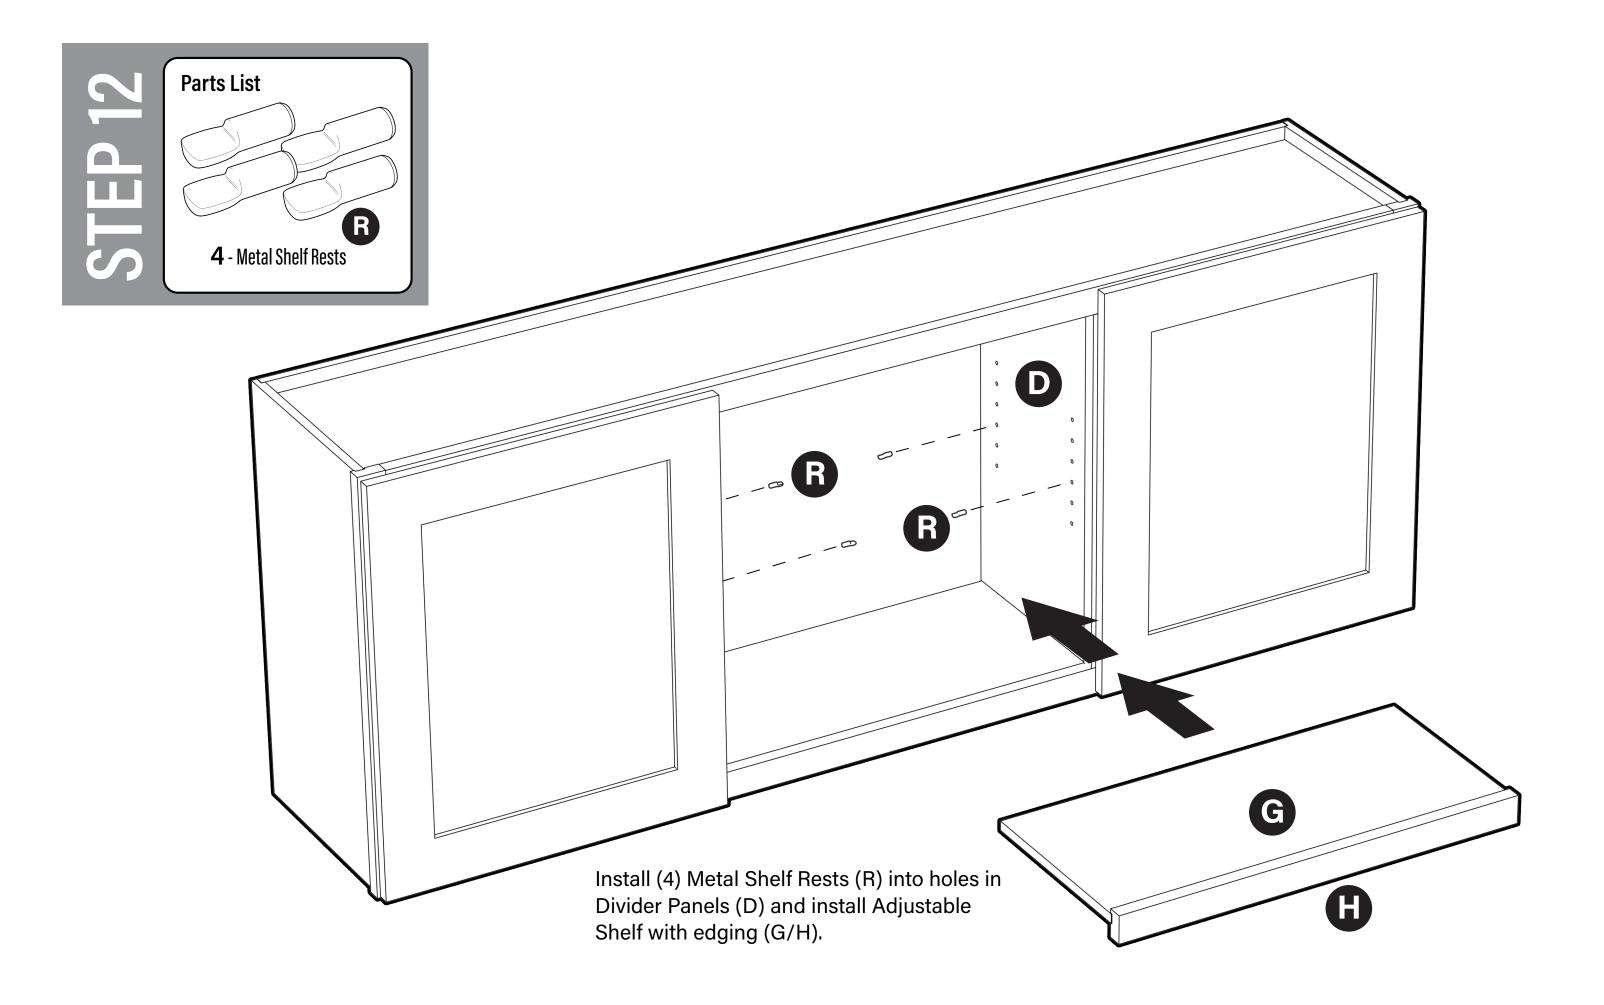

YOU'RE FINISHED

